

Mega Beast in-use safety checks clarification:

This notice is for clarification of safety use of the Mega Beast Service Conductor Tester. If any, of the eight self cooling load elements are not working properly, overheating of the unit may occur. This could cause full unit failure and other potential hazards.

*The following **MUST** be done **EACH** time before and after unit is used:*

1. Always wear company approved personal protection equipment (PPE).
2. Do not leave unit or meter base unattended at any time.
3. Inspect meter base, remove meter from meter base, and disconnect neutral leading to customer panel.
4. Always connect the neutral clip first before operating this device.
5. Attach black voltage clip to left side and red voltage clip to right side to meter base conductors.
6. Turn on one of the secondary switches which, controls two load elements and check for air flow on each load element. Place hand near front of exhaust vent, but use caution there is hot air flow coming out of exhaust vent and burns could occur. If hot air is flowing at a normal rate, repeat this process for the other switches. If any load element is not working which, include any smoke, sparks, or red glowing on load element are observed shut off unit immediately, disconnect it from the meter base and return it for repair. At no time should the unit be running where any load element is not working properly; return the unit to the manufacture for repairs.

Once the unit passes safety checks, then unit may be used to test the service conductors and neutral or store unit in proper place for transportation.

